



# Installation instructions




## **Installation instructions**

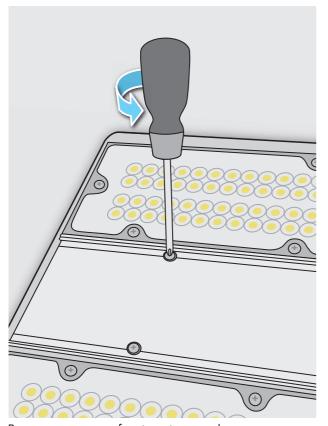



Remove screws on front centre panel

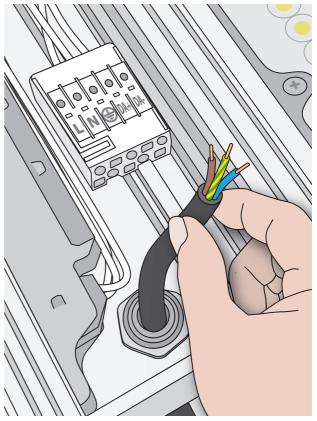

Check wiring requirements on terminal block. feed supply cable through the gland

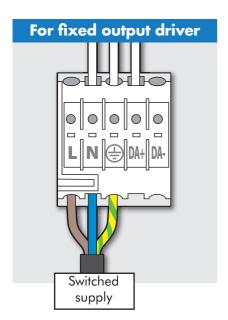


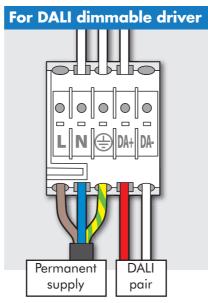

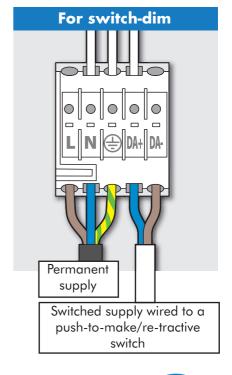


Innovation.
Collaboration.
Illumination.

## **Installation instructions**

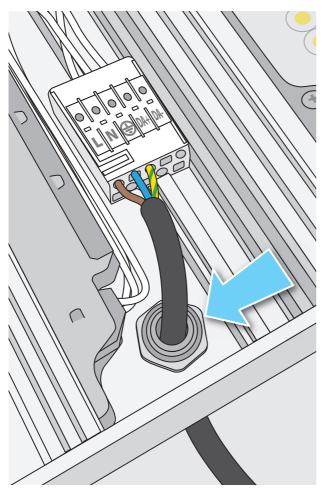

Wire supply in to the terminal block and tighten gland

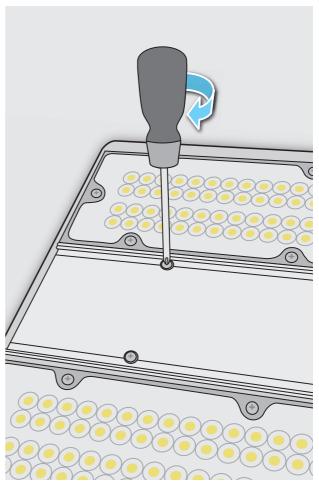



Re-fit front panel and tighten screws



## **Installation instructions**

# Surface mount fixing

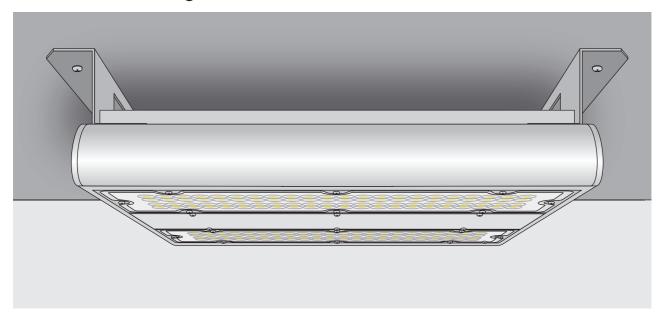

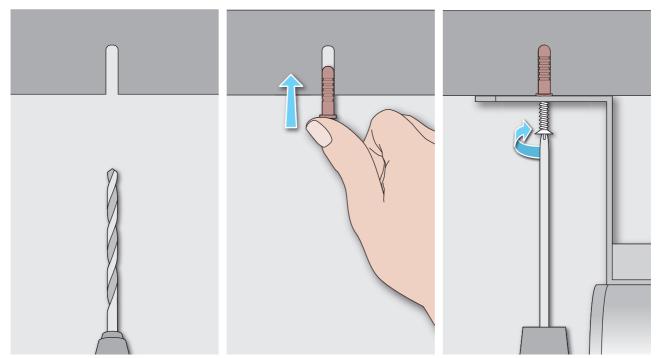

Mark and drill 4 x 6mm holes


Insert raw plugs

Insert screwws and tighten



## **Installation instructions**


# Suspension fixing

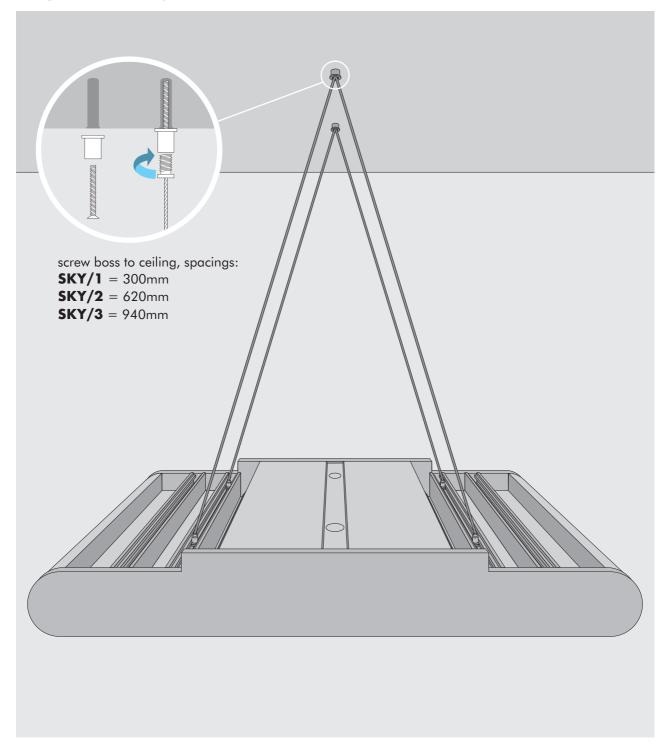





## **Installation instructions**

# Suspension fixing

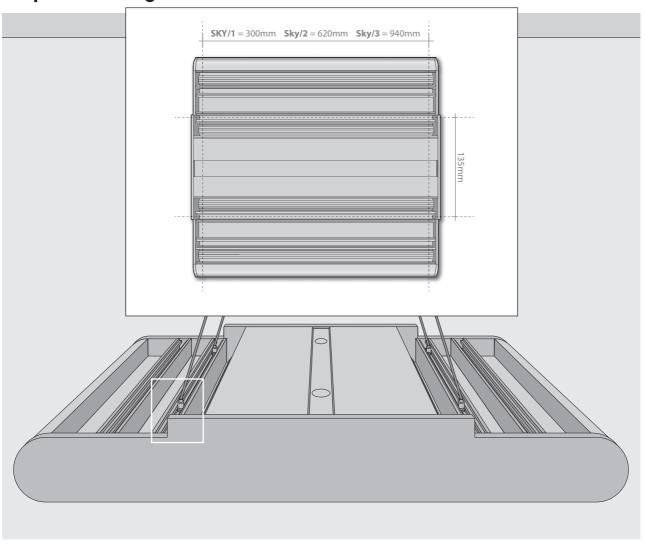


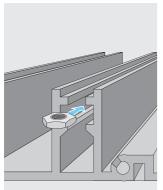




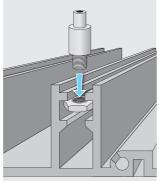

Line up suspension clutches

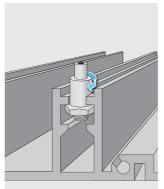

Fit suspension clutches to M6 nuts

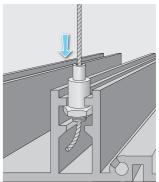


feed suspension wire the the clutches



## **Installation instructions**

# Suspension fixing

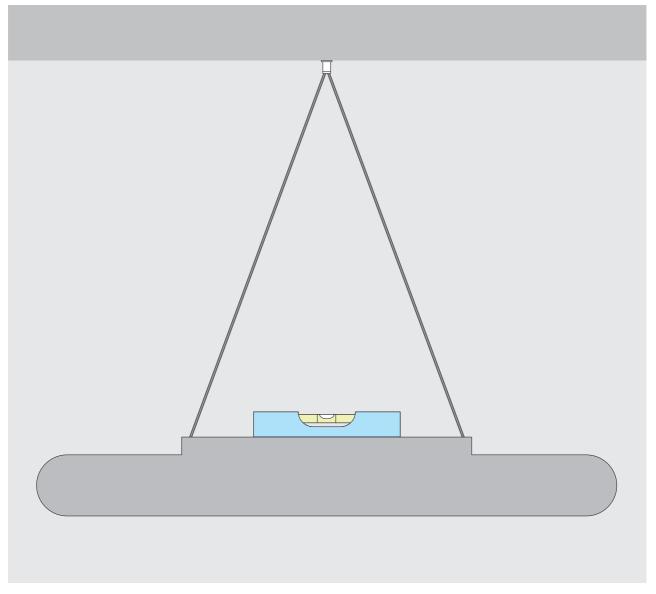

Level Skylar

