


# LED 2000 LED DOWNLIGHTER

# **Installation instructions**




#### **LED2000** - LED DOWNLIGHTER


## **Installation instructions**

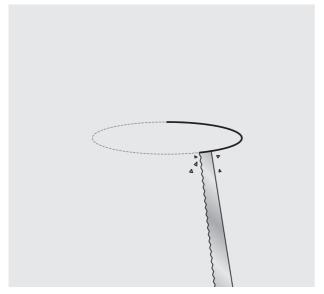



Cut Ø95mm hole in the ceiling.

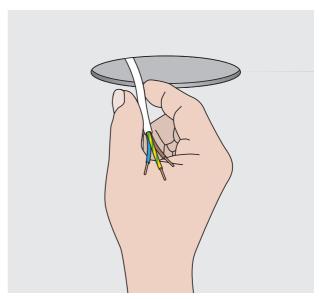

Pull the cable through the hole and connect to the driver.

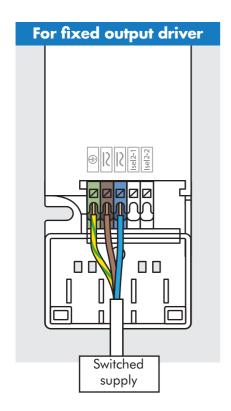

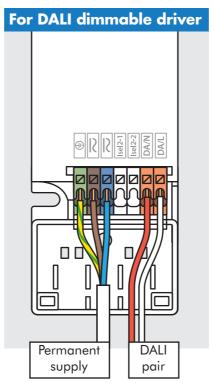


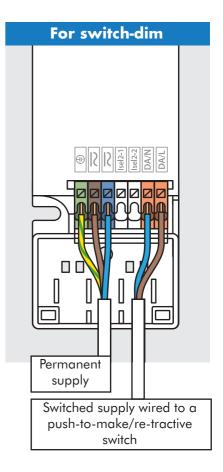




#### **LED2000** - LED DOWNLIGHTER

## **Installation instructions**

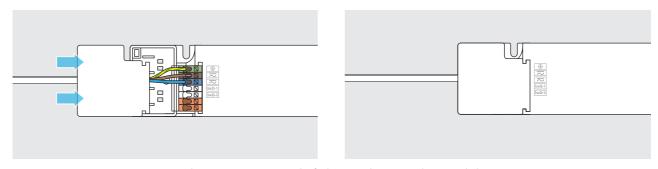

Clip on any strain relief clips and terminal cover/lid.

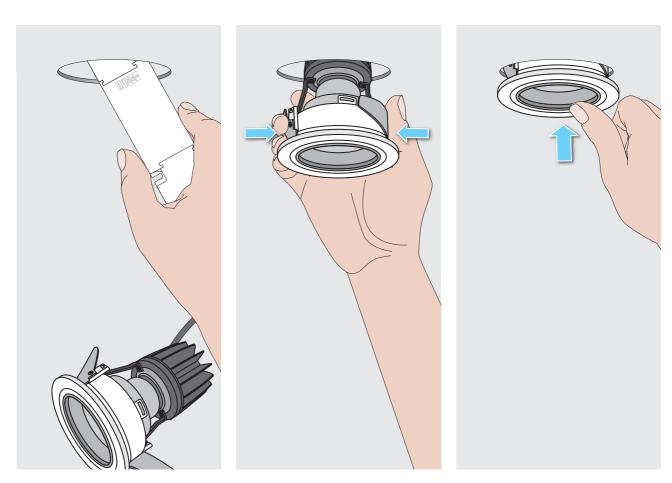

Insert the driver and the back of the downlight through the Ø95mm hole.

Squeeze springs together and push in to the ceiling.

Push LED2000 until fully installed.

